


SmallRig

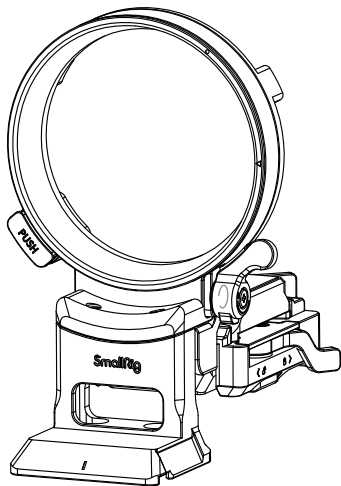

Rotatable Horizontal-to-Vertical Mount Plate Kit for Sony Alpha 1 / Alpha 7 / Alpha 9 / FX Series


User Manual

Thank you for purchasing SmallRig's product.


Warnings

- Please read this User Manual carefully.
- Please keep the User Manual properly, and be sure to attach this User Manual when handing over the product to others.
- Please heed all warnings and follow all instructions in the owner's manual.


In the Box

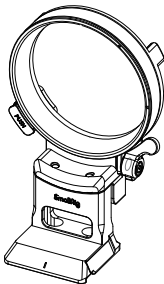

 ① Rotatable Horizontal-to-Vertical Mounting Plate × 1



 ② Arca-Swiss Quick Release Plate & Arca-Swiss Baseplate × 1




③ Connecting Plate × 1



④ Allen Wrench × 1

Product Details

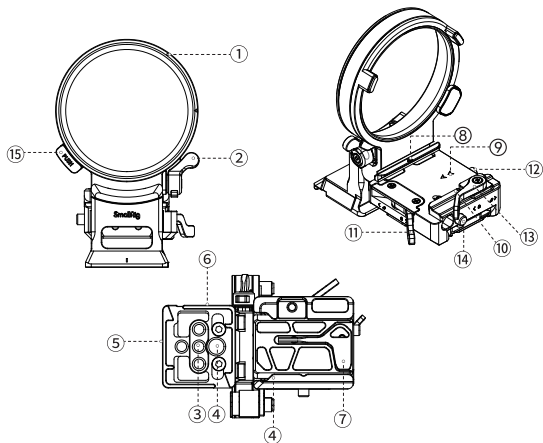


- ① Lens Mounting Marking
- ② Horizontal-to-Vertical Locking Lever
- ③ 1/4"-20 Threaded Hole
- ④ 3/8"-16 Threaded Hole
- ⑤ Arca-Swiss Quick Release Plate
(*The quick release plate is compatible with DJI RS series quick release baseplate)
- ⑥ Manfrotto RC2 Quick Release Plate
- ⑦ Dual-Head Wrench
- ⑧ Lens Orientation Marking
- ⑨ Quick Release Plate slides Orientation Marking
- ⑩ Centerline Marking
- ⑪ Lens Ring Locking Lever
- ⑫ Lens Ring Anti-Off Button
- ⑬ Arca-Swiss Baseplate Locking Lever
- ⑭ Arca-Swiss Quick Release Plate Anti-Off Button
- ⑮ Lens Release Button

Installation Instruction


***Please remove the lens before installing the product.**

 Step 1: Install the baseplate.


1. Remove the quick release plate: Unlock the locking lever on the Arca-Swiss plate first, and press the Arca-Swiss quick release plate anti-off button to remove the Arca-Swiss quick release plate.



2. Loosen the anti-twist plate screws on the Arca quick release plate using the Dual-Head Wrench. Secure to the bottom of the camera using the 1/4"-20 screw on the Arca quick release plate, and use the Dual-Head Wrench to lock it in place. Adjust the anti-twist plate position according to the camera body size, and then use the Dual-Head Wrench to secure it.

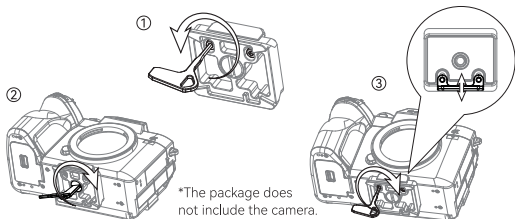


3. Slide the camera into the Arca-Swiss baseplate from right to left.
***Note:** The centerline of the cage & quick release plate shall be aligned with the centerline of the Arca-Swiss baseplate.

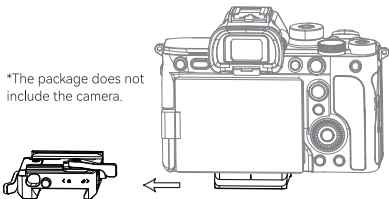


Step2: Install the Rotatable Horizontal-to-Vertical Mounting Plate.


1. Unlock the Horizontal-to-Vertical Locking Lever, then turn the mounting plate counterclockwise 90° to unfolded state.

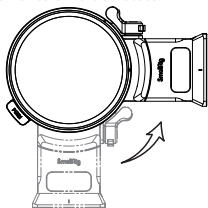

2. Install the connecting plate: Align the connecting plate with the two M4 screws at the bottom of the mounting plate and use the allen wrench to lock it, and please do not lock it completely here.

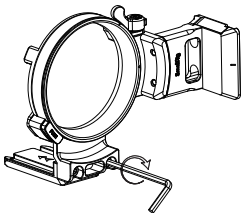


3. Install the lens ring: Unlock the Lens ring locking lever, slide the lens ring connecting plate into the slot hole under the baseplate and then lock the lens ring lever .

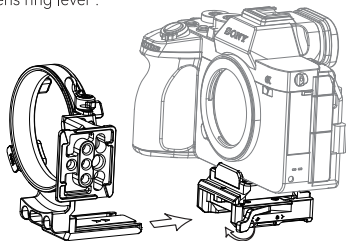

*The package does not include the camera.


4. Adjust the position of the lens ring to align with the center of the lens, and then use the allen wrench to lock it.

*The package does not include the camera.

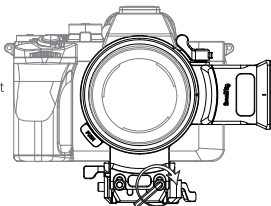


5. Rotate the lens ring 90° clockwise, then lock the Horizontal-to-Vertical Locking Lever.

*The package does not include the camera.

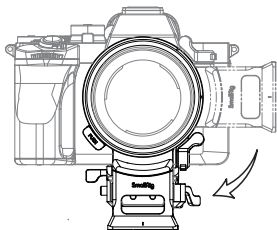

Instruction


Unlock the Horizontal-to-Vertical Locking Lever to switch between vertical and horizontal shooting.

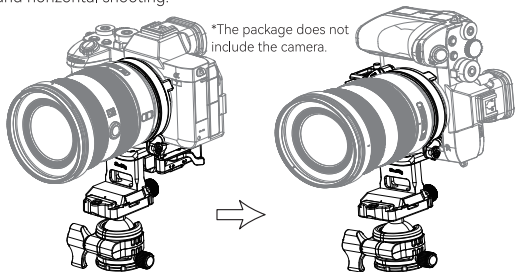

Disassembly Instruction

***Please remove the lens before disassembling the product.**


Step1: Remove the lens ring: Unlock the lens ring locking lever, press and hold the lens ring anti-off button to slide the lens ring connecting plate out of the slot hole under the baseplate.

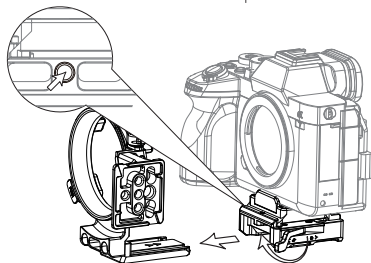

*The package does not include the camera.

Step2: Remove the camera: Unlock the Arca-Swiss baseplate Locking Lever, press and hold the Arca-Swiss quick release plate button to slide the camera out to the right.

*The package does not include the camera.

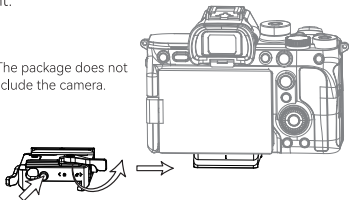

Specifications

Compatibility	Compatible Camera Models: Sony Alpha 7 III / Alpha 7 IV / Alpha 7R III / Alpha 7R IV / Alpha 7R V / Alpha 7S III / Alpha 1 / Alpha 9 II / FX3 / FX30
	Compatible Camera Cages: 2087D / 3667 / 3667B / 3639 / 4308 / 4138 / 4183
Product Dimensions	118.5 × 107 × 72mm
Product Weight	220 ± 5g
Material(s)	Aluminum Alloy, Stainless Steel