

GaN 100W Fast Charger

User Manual

Warnings

- Please keep the user manual properly. For your safety and the safety of others, please ensure that this user manual is enclosed with the device when it is borrowed by someone.
- Please read all warnings carefully and adhere to the device usage specifications outlined in this manual.
- Children should only operate this equipment under adult supervision. Please do not leave the device unattended without continuous supervision.
- Please do not operate the device or power cable if they are damaged. In the event that the device or accessories are damaged or experiencing a fault, please seek assistance from a qualified repairing engineer.
- Please make sure that the device has completely cooling down before storage. Place it in the appropriate compartment in the carry bag.
- To ensure proper operation of the device, it is recommended to store it in a cool, dry, and clean environment. Do not store the device near damp areas or in the vicinity of liquids, flammable substances, or volatile solvents to avoid damaging the device.
- Working temperature: $-10 \sim 45 \text{ }^{\circ}\text{C}$ ($14 \sim 113 \text{ }^{\circ}\text{F}$)
- Reference storage temperature/ humidity:
 $20 \text{ }^{\circ}\text{C} \pm 5 \text{ }^{\circ}\text{C}$ ($59 \sim 77 \text{ }^{\circ}\text{F}$) / $60 \pm 15\%$
- If you need to clean the surface of this device, please use a dry, soft cloth for cleaning. Before cleaning and performing maintenance, make sure to disconnect the power adapter and body connection cable.
- To reduce the risk of electric shock, it is strictly prohibited to immerse this device in water or any other liquids.



Please do not disassemble the product or change its battery. If you have any question, please contact the seller to apply after-sales service.

Using Your Wall Charger

1. Plug it into the wall outlet.
2. Please connect your devices to the wall charger with USB charging cables.
3. Remove the wall charger from the wall outlet once charging is completed.

Note

It'll be trickle charging when your devices tend to be 100% charged.

Frequently Asked Q & A

Q1: Why doesn't one of the ports charge?

A1: Please change the charging cable or devices or try another wall charger to see if it works. If it still won't work, please contact us directly, we will try our best to fix the problem.

Q2: Why can't I get full 100W to charge or why does it charge my RC 60B slowly even when I only use one USB-C port?

A2: Please use the USB cable enclosed in the package of RC 60B, or use a USB-C to USB-C cable with a 5A E-marker chip if you need 60W for a full charge of RC 60B. An ordinary USB-C cable usually supports a maximum of about 60W power transfer, which may not provide enough power to efficiently charge your RC 60B.

Specifications

Model	RH-PD100W
Name	GaN 100W Fast Charger
Input	AC 100-240V-2A 50-60Hz
Output	5V / 3A, 9V / 3A, 12V / 3A, 15V / 3A, 20V / 5A 100W MAX
Weight	200 g / 7.05 oz
Size	73 × 70 × 30 mm / 2.87 × 2.75 × 1.18 in