# SmallRig

## "Night Eagle" Cage Kit for Nikon Z 8

## 尼康 Z 8 "夜鹰" 拓展框套件
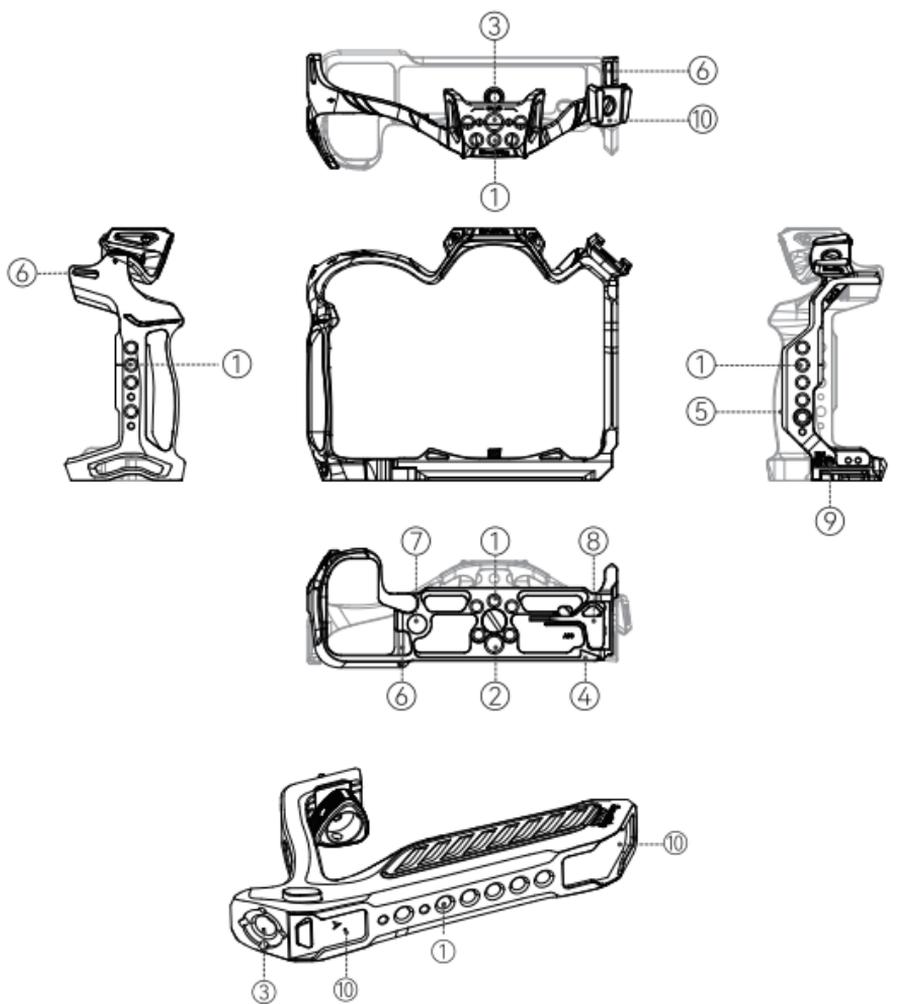
· Thank you for purchasing SmallRig's product.
  感谢您购买 SmallRig 产品。

· Please read this Operating Instruction carefully.
  使用本产品之前，请仔细阅读操作指引。

· Please follow the safety warnings.
  请注意所有警告提示并遵循使用操作指引的所有指令。

## In the Box / 包装清单

| 4316 | Cage / 拓展框 | × 1 |
|---|---|---|
| | Cold Shoe Mount / 冷靴转接件 | × 1 |
| | Operating Instruction / 操作指引 | × 1 |
| | Guarantee Card / 保修卡 | × 1 |
| 4317 | Cage / 拓展框 | × 1 |
| | Top Handle / 上提手柄 | × 1 |
| | Cold Shoe Mount / 冷靴转接件 | × 1 |
| | HDMI & USB-C Cable Clamp / HDMI & USB-C 线夹 | × 1 |
| | Operating Instruction / 操作指引 | × 1 |
| | Guarantee Card / 保修卡 | × 1 |

# Product Details / 产品介绍



① 1/4"-20 Threaded Hole
   1/4"-20 螺纹孔

② 3/8"-16 Threaded Hole
   3/8"-16 螺纹孔

③ ARRI 3/8"-16 Locating Hole
   阿莱(ARRI) 定位孔

④ Arca-Swiss Quick Release Plate
   阿卡规格快装板

⑤ NATO Rail
   滑条

⑥ Strap Slot
   肩带 / 腕带接口

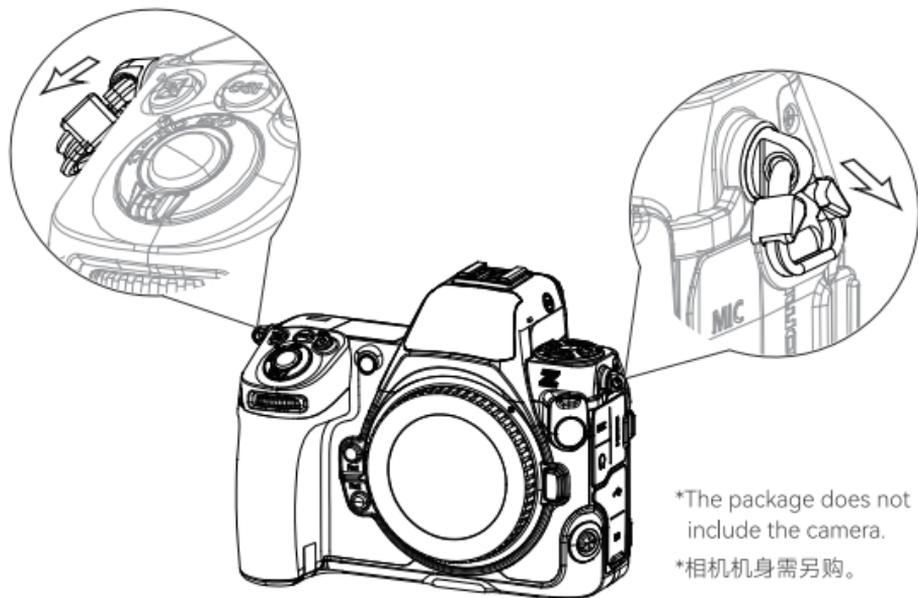⑦ QD Socket
   QD 接口

⑧ Dual-Head Wrench
   双头扳手

⑨ M2.5 Screw
   M2.5 螺丝

⑩ Cold Shoe
   冷靴

## Cage Installation Instruction / 拓展框安装步骤

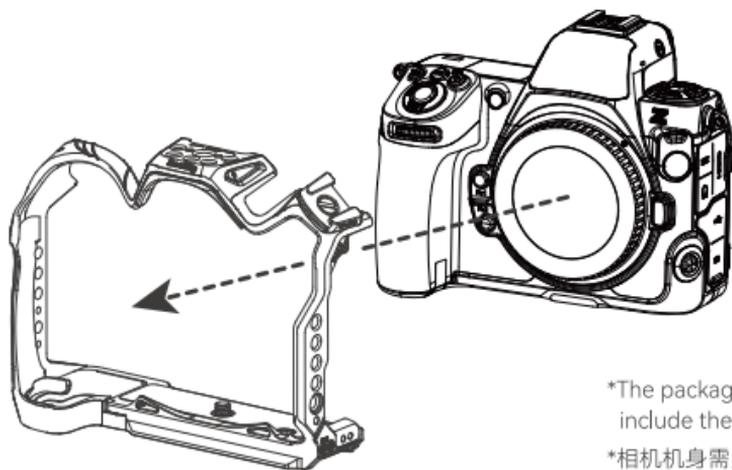1. Remove both of the split rings before installing the cage.
   取下相机双侧肩带环。

*The package does not include the camera.
*相机机身需另购。

2. Install the Cage / 安装拓展框。

Insert the camera into the cage from the back.

将相机从后往前放入相机拓展框。
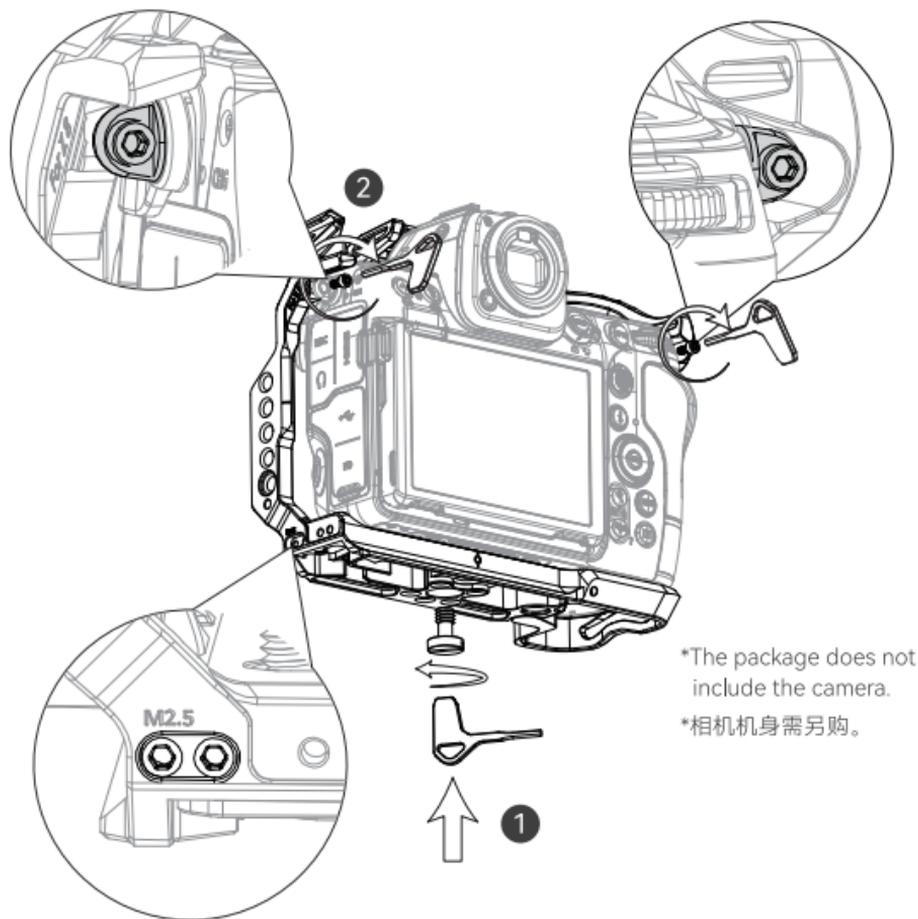
*The package does not include the camera.
*相机机身需另购。

**1** Lock the cage by tightening the 1/4"-20 screw.

拧紧底部1/4"-20 螺丝,锁紧固定拓展框。

**2** Remove the two M2.5 screws at the bottom left side of the of the cage, then pass the M2.5 screws through the shoulder strap holes on both sides of the camera and tighten them into the cage.
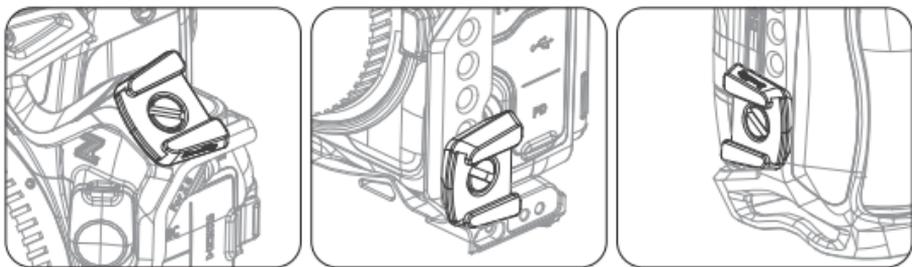
取下拓展框左侧底部的两颗M2.5 螺丝，然后将M2.5 螺丝分别穿过相机双侧肩带孔与拓展框锁紧固定。



M2.5

*The package does not include the camera.

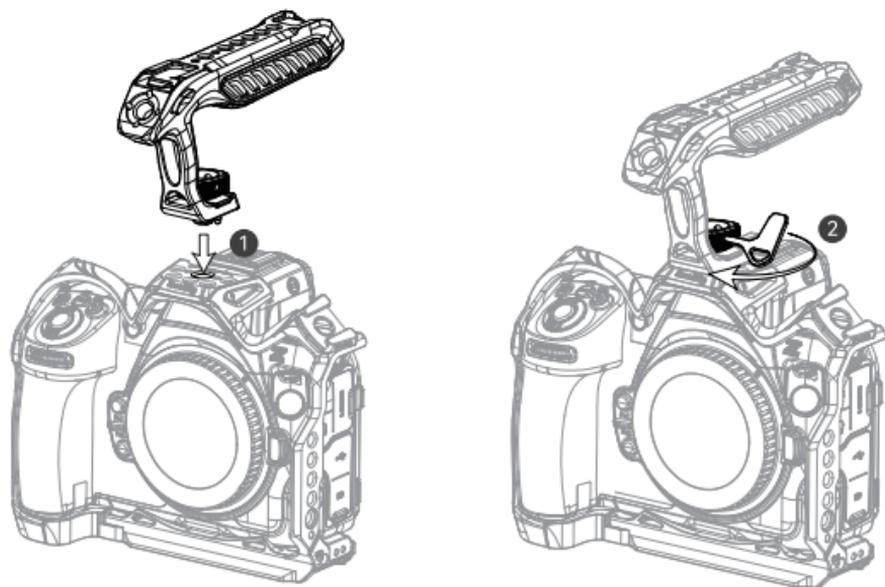*相机机身需另购。

### 3. Install Cold Shoe Mount / 安装冷靴

Install the cold shoe mount on the top or both sides of the cage by attaching it to the built-in 1/4"-20 locating holes.

可将冷靴安装至拓展框顶部或双侧有内置1/4"-20 定位螺纹孔处。
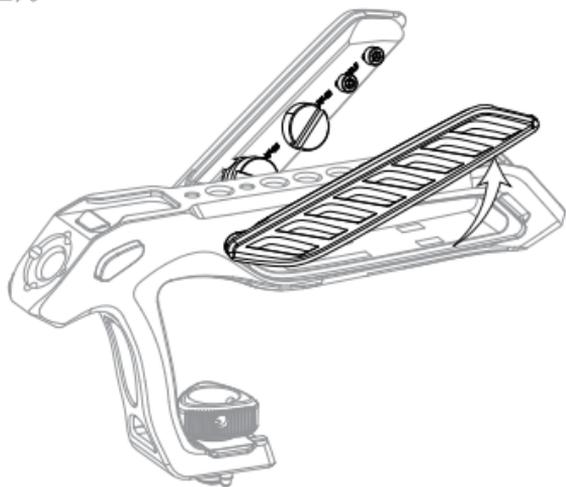


## Top Handle Installation Instruction / 上提手柄安装步骤

**1** Attach the top handle to the ARRI 3/8"-16 locating hole on the cage.

将上手提对准相机拓展框的阿莱(ARRI) 定位孔

**2** Tighten the ARRI 3/8"-16 locating screw by using the double-ended wrench from the bottom of the cage.

拧紧阿莱(ARRI) 定位螺丝，使用拓展框底部的双头扳手加固锁紧。

## Screw Storage Solution / 存储或取用螺丝

Open the silicone cover on the left side of the handle to store or access screws (such as 1/4"-20 screws, 3/8"-16 screws, M2.5 screws).
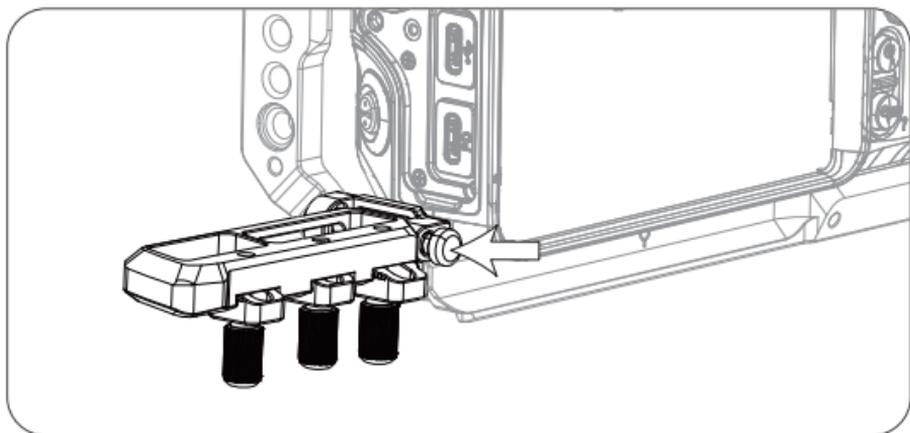
打开上手提左侧硅胶盖，即可存储或取用螺丝（如1/4"-20 螺丝、3/8"-16 螺丝、M2.5螺丝）。

## HDMI & USB-C Cable Clamp Installation Instruction
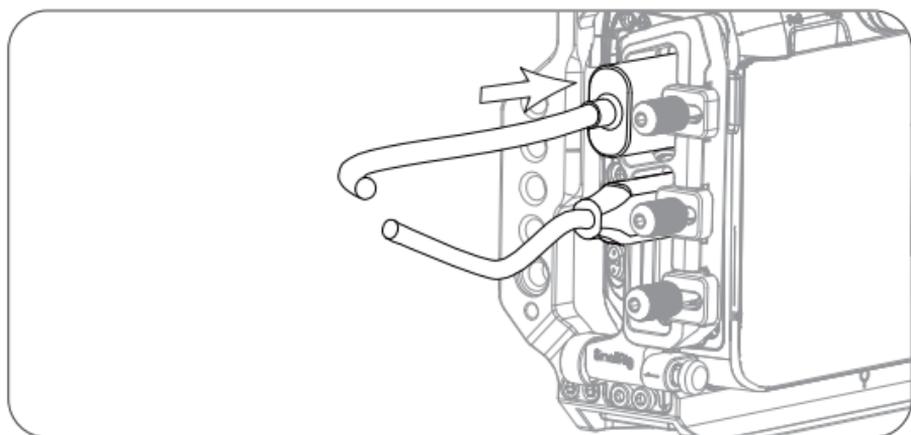## HDMI & USB-C 线夹安装步骤

Step 1: Press the button to rotate the cable clamp and open the camera interface cover.
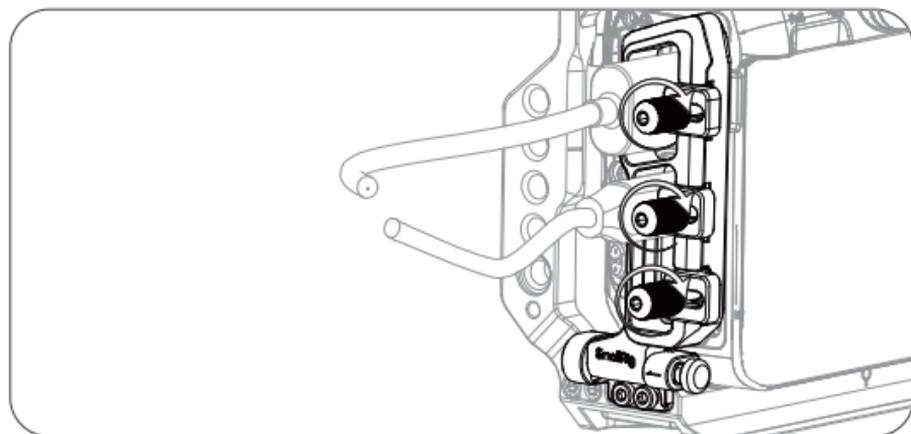
第一步：按压侧边按钮，旋转线夹，并打开机身盖。

Step 2: Flip the clamp back, and insert the HDMI & USB-C cables.

第二步：转回线夹，插入 HDM I & USB-C 线。



Step 3: Tighten the thumb screw.

第三步：拧紧手拧螺丝锁紧。

## Specifications / 产品参数

| SKU | 4316 |
| --- | --- |
| Product Dimensions / 产品尺寸 | 2.3 × 2.4 × 5.1in / 58.9 × 61.5 × 130.5mm |
| Product Weight / 产品重量 | 6.4 ± 0.1oz / 182.0 ± 5.0g |
| Material(s) / 主要材质 | Aluminum Alloy, silicone / 铝合金，硅胶 |

| SKU | 4317 |
| --- | --- |
| Product Dimensions / 产品尺寸 | 7.1 × 5.7 × 7.9in / 180.0 × 146.0 × 201.2mm |
| Product Weight / 产品重量 | 13.6 ± 0.1oz / 387.0 ± 5.0g |
| Material(s) / 主要材质 | Aluminum Alloy, silicone / 铝合金，硅胶 |

CE RoHS  合格证 已检验

22
PAP

Made in China
中国制造