
SmallRig

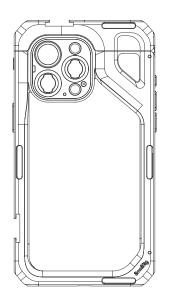

Mobile Video Cage for iPhone 15 Pro Series

User Manual

Thank you for purchasing SmallRig's product.

Warnings

- · Please read this User Manual carefully.
- Please heed all warnings and follow all instructions in the owner's manual.

Introduction


Welcome to the all-new SmallRig Mobile Video Cage for iPhone 15 Series, which provides a professional and convenient solution for iPhone 15 pro users to shoot video and live broadcasts. The cage is exclusively designed for the iPhone 15 Pro and Pro Max, which does not affect the phone's buttons when shooting, and it can provide a tight fit for the mobile phone with all-round security protection. With the cold shoe mounts and 1/4"-20 threaded holes on the frame, the cage allows you to easily attach the lights, microphone, tripod, side handle, top handle, and other equipment when shooting on mobile phones. When connecting with the side handle/ top handle/ tripod, this cage is not only compatible with conventional products attached by 1/4"-20 screw but also supports SmallRig's new Quick Release Ecosystem, which is convenient, fast, stable, and efficient.

The SmallRig iPhone 15 Series cages are fully compatible with Apple's official MagSafe products.

In the Box

Cage	× I
Spare Screw	× 3
User Manual	× 1

Product Details

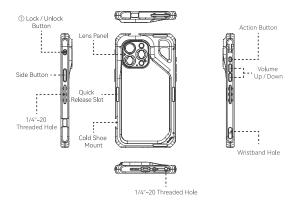


Usage

(1) Advanced functions: There are multiple standard 1/4"-20 Threaded Holes on each side of the cage for extending side handles, top handles, and tripods with 1/4"-20 screws. There are two standard Cold Shoe Mounts on the cage, which can be used to attach the light, microphone, and other equipment with the cold shoe.



(2) Quick Release: There is a Quick Release Slot on each of the four sides of the cage frame. The Quick Release Slot interfaces with the 1/4"-20 threaded holes on the cage, expanding SmallRig's unique Quick Release Ecosystem.

Quick Release Lock: As shown below, align the Locating Pins on the Quick Release Adapter with the upper and lower 1/4"-20 threaded holes on the cage, and press the side handle (Note: No need to press the Unlock Button simultaneously). There will be a "click" sound, indicating that the side handle has been successfully locked into the cage.



(3) Attach the Phone: Press the unlock button on the left side of the cage, open the cover, and slowly slide the phone into the cage body. Then close and press the upper cover until you hear a "click" sound, indicating that the upper cover and lower body are locked.




(4) Attach an External Lens: The lens panel on the back of the cage allows users to attach the external lens while shooting with the mobile phone. Attaching external lenses of different sizes can be achieved by replacing the lens panel or adding adapters. At present, the SmallRig iPhone 15 series cages support M-mount lenses, 17mm diameter threaded lenses, 37mm diameter threaded lenses, and T series lenses of M Brand. The cage comes standard with an M-mount lens panel, and 17mm, 37mm, and T series lens panels need to be purchased separately.



Replace the Lens Panel: Remove the 1/4"-20 screw inside the cage with a screwdriver and remove the lens panel diagonally to the right. As shown in the figure below, snap the back panel diagonally to the left into the slot of the cage, then insert the panel into the cage body, and finally tighten the 1/4"-20 screw from the inside of the cage.



(5) Install Filters: Install a filter adapter ring on the back panel to use external filters. Filters and M-mount filter adapters need to be purchased separately.



Note: 52mm M-mount filter adapter ring 3840C is compatible with SmallRig iPhone 11 - iPhone 15 series cages; 52mm magnetic VND, CPL, 1/4 black mist, and magease magnetic star-cross filter are available in all SmallRig sales channels.